



FORMENTI & GIOVENZANA

SPT: 50101

I.M.:

Dis.: POZZOLI
Drawer.:


Data: 08.07.10
Date:

Visto: *Luca...*
Check.:


Data: 08.07.10
Date:

Denominazione: POSTERIORI IN METALLO E ATTACCHI PER POSTERIORE LEGNO
Part Name: STEEL BACK PANELS AND WOODEN BACK PANEL

Pag: 1/2

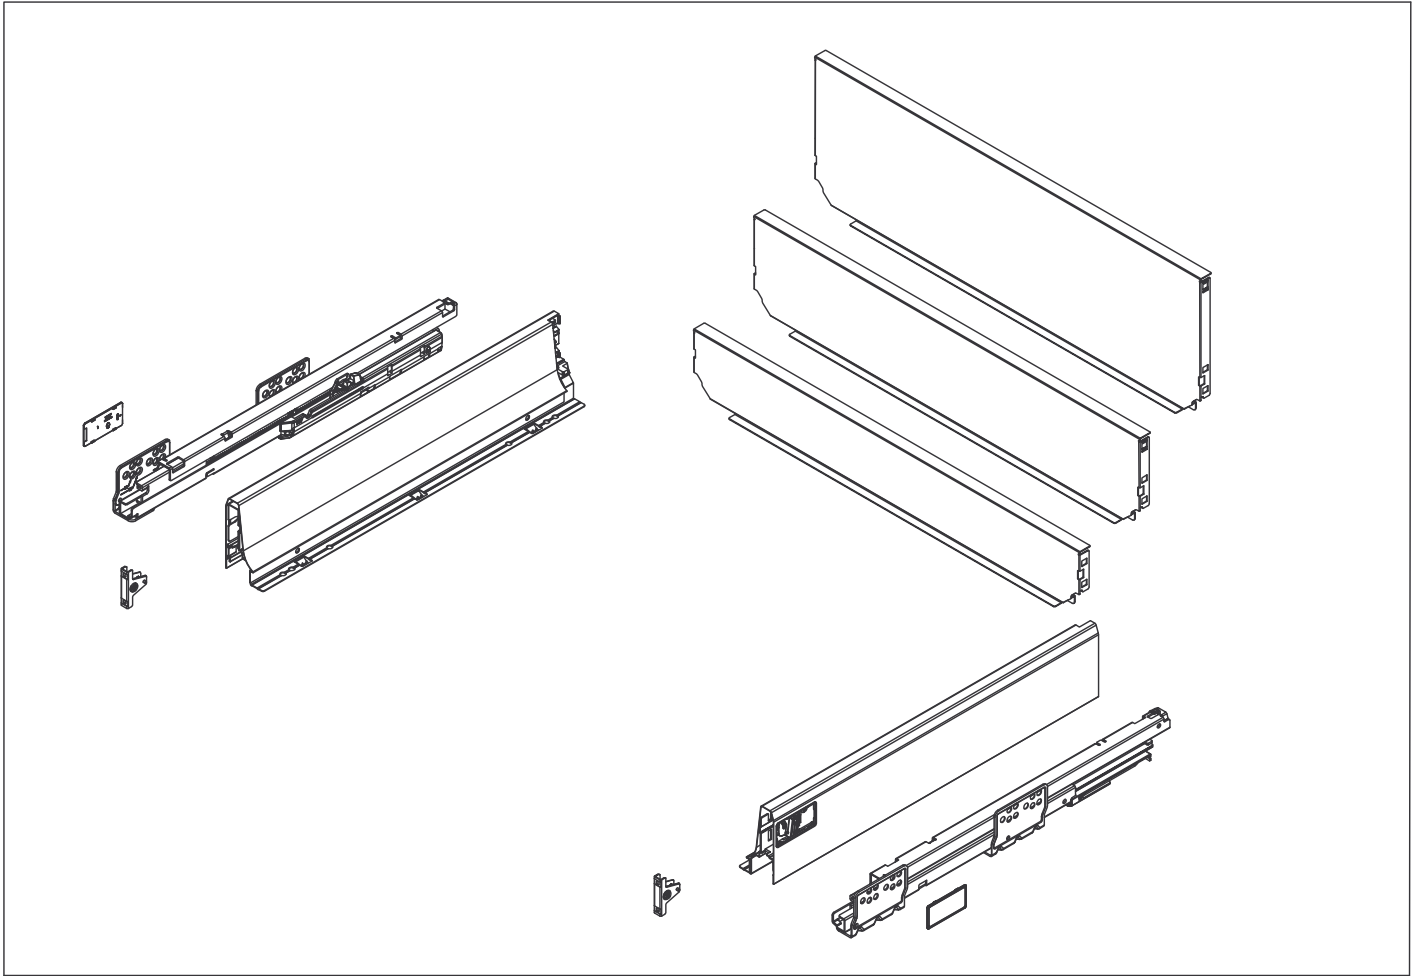

POSTERIORE LAMIERA
METAL BACK PANEL

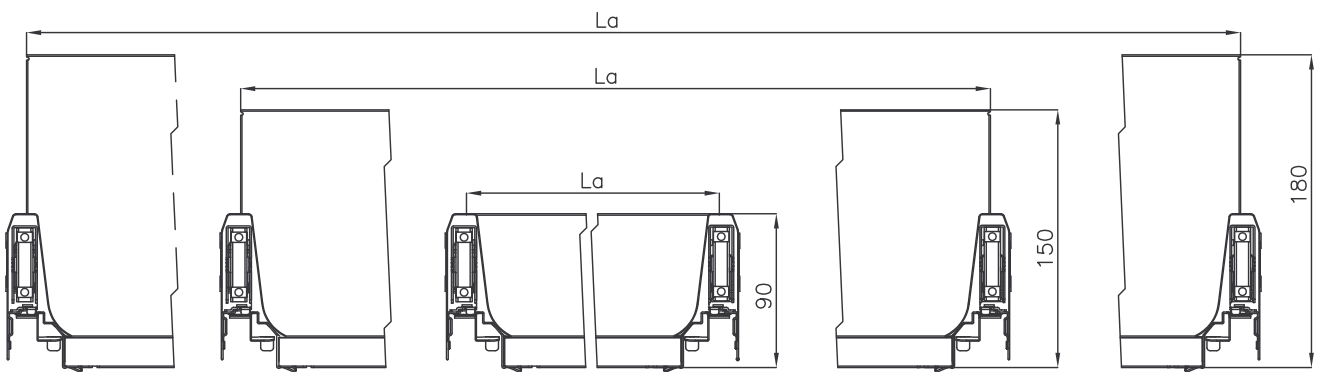

SPALLE PANEL	La										
19mm	227.5	277.5	327.5	377.5	427.5	527.5	627.5	727.5	827.5	927.5	1127.5
18mm	229.5	279.5	329.5	379.5	429.5	529.5	629.5	729.5	829.5	929.5	1129.5
16mm	233.5	283.5	333.5	383.5	433.5	533.5	633.5	733.5	833.5	933.5	1133.5
15mm	235.5	285.5	335.5	385.5	435.5	535.5	635.5	735.5	835.5	935.5	1135.5
BASI CABINET	300	350	400	450	500	600	700	800	900	1000	1200



FORMENTI & GIOVENZANA

SPT: 50101

I.M.:

Dis.: POZZOLI
Drawer.:


Data: 08.07.10
Date:

Visto: *Luca...*
Check.:

Data: 08.07.10
Date:

Denominazione: POSTERIORI IN METALLO E ATTACCHI PER POSTERIORE LEGNO
Part Name: STEEL BACK PANELS AND WOODEN BACK PANEL

Pag: 2/2

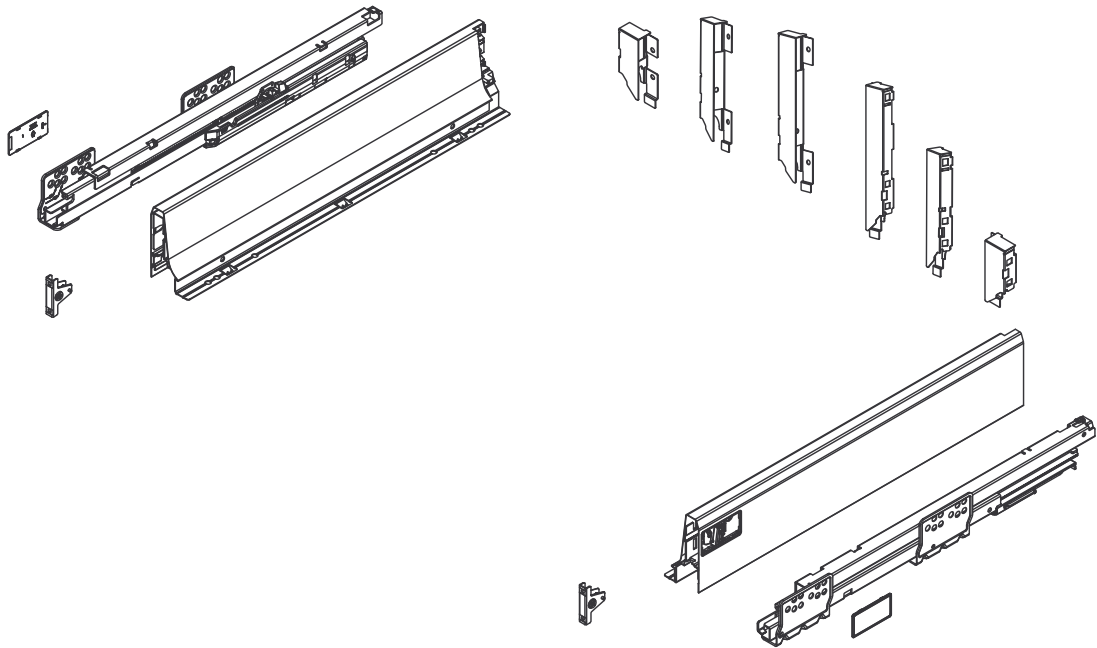

POSTERIORE LEGNO
WOODEN BACK PANEL

